

ASSEMBLY INSTRUCTIONS

8300 SERIES TRACK

Accordia-Fold Draperies Configured as a Panel

Cut track to length and insert one end cap. Next, insert the baton master using a left hand baton master if you want the drapery to stack on the left side of the window (the left hand baton master is illustrated above). If you want the drapery to stack on the right side of the window, use the right hand master. After selecting and inserting the master carrier, insert all snap tab carriers and the last end cap. Attach the wall mount track bracket to the top of the track, leaving 24" to 36" between each one. Once all of the wall brackets are installed, hold the entire track system up to the wall and mark the holes you need to drill. Remove wall brackets from the track and attach them to the wall. Once the brackets are mounted, re-attach the track to the brackets. Hang drapery and check to ensure smooth operation.


For smoother operation, lightly spray the inside of the track with an aerosol silicone lubricant. Depending upon environment, clean and re-lubricate as necessary.


Accordia-Fold Draperies Configured as a Pair

Cut track to length and insert one end cap. Next, half of the snap tab carriers, the right hand baton master, the left hand baton master, the remaining snap tab carriers, and the last end cap. Attach the wall mount track bracket to the top of the track, leaving 24" to 36" between each one. Once all of the wall brackets are installed, hold the entire track system up to the wall and mark the holes you need to drill. Remove wall brackets from the track and attach them to the wall. Once the brackets are mounted, re-attach the track to the brackets. Hang draperies and check to ensure smooth operation.

For smoother operation, lightly spray the inside of the track with an aerosol silicone lubricant. Depending upon environment, clean and re-lubricate as necessary.



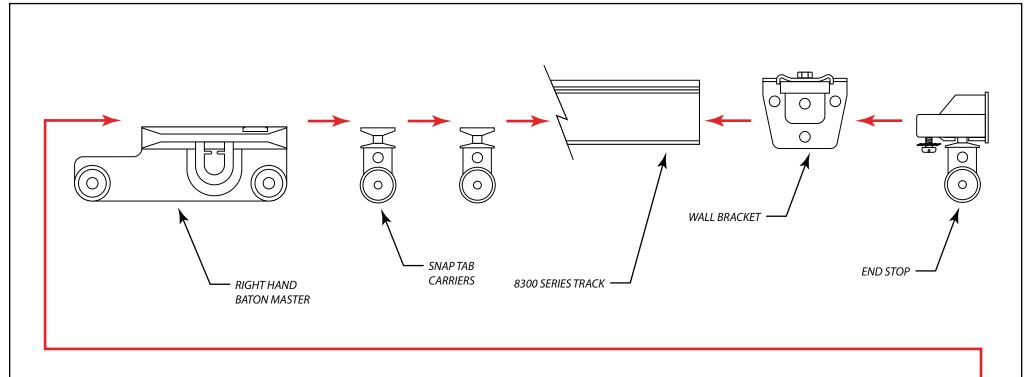

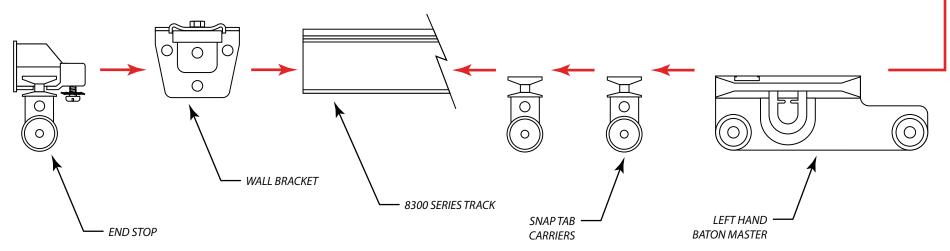

CONFIDENTIAL


All materials disclosed in this document are proprietary to Diamond Drapery Co., Inc. The Holder agrees to maintain it in 17-DFC-2008 | Inchast/Faat confidence and must not replicate or reveal this information in any manner.

Project:

.	1		
	Date:	Dimensions:	
	17-DEC-2008	Inches/Feet	
1			
	Scale:	Ву:	
	DO NOT SCALE	C. Johnson	



7439 Lampson Avenue Garden Grove, CA 92841 (714) 761-4543 OFFICE (714) 761-4623 FAX

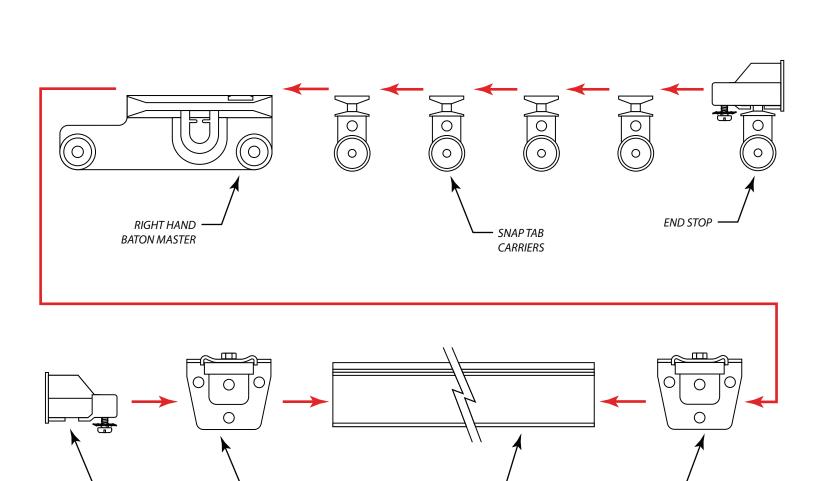

CONFIDENTIAL

8300 SERIES TRACK -

WALL BRACKET

- END STOP

All materials disclosed in this document are proprietary to Diamond Drapery Co., Inc. The Holder agrees to maintain it in 22-DFC-2008 Inches/Feet confidence and must not replicate or reveal this information in any manner.

Project:

DO NOT SCALE


WALL BRACKET

•		
Date:	Dimensions:	
22-DEC-2008	Inches/Feet	
Caples	D	

C. Johnson



7439 Lampson Avenue Garden Grove, CA 92841 (714) 761-4543 OFFICE (714) 761-4623 FAX

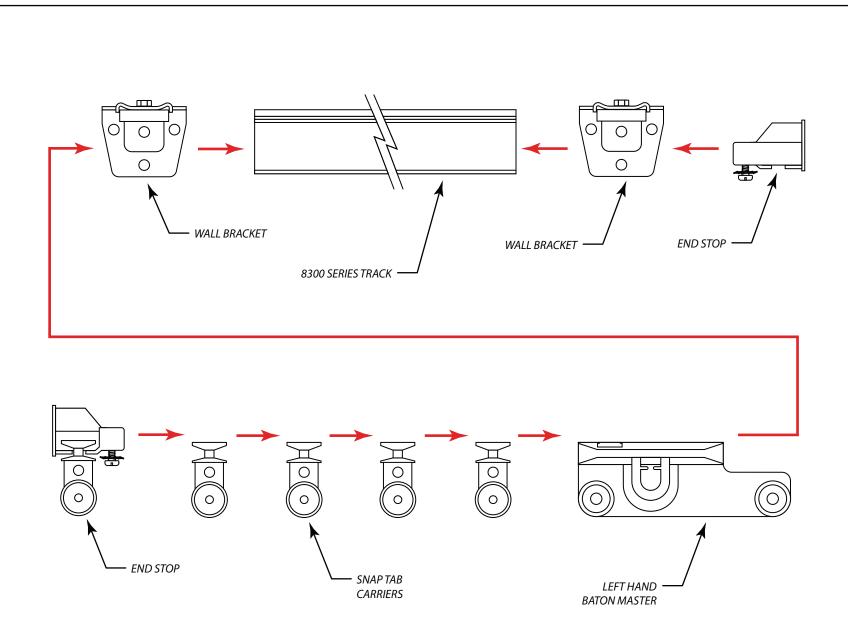

CONFIDENTIAL

All materials disclosed in this document are proprietary to Diamond Drapery Co., Inc. The Holder agrees to maintain it in 23-DFC-2008 Inches/Feet confidence and must not replicate or reveal this information in any manner.

Project:

DO NOT SCALE

Date:	Dimensions:
23-DEC-2008	Inches/Feet
le 1	1-

C. Johnson



7439 Lampson Avenue Garden Grove, CA 92841 (714) 761-4543 OFFICE (714) 761-4623 FAX